

Color LCD Logic Panel



LP-A Series CATALOG MANUAL

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

- Equipped with TFT LCD for realizing True color
- Easier system configuration and use with PLC, HMI, I/O all-in-one design
- Horizontal/Vertical installation according to environment
- Available to monitor device of the connected controllers even without user screen data
- Using user screen drawing program 'atDesigner'
 - : More variety functions, objects and library image
 - : Intuitive user interface
 - : Multilingual table function: switching language of user screen by touching a button
- Various communication interface: RS232C, RS422, Ethernet, CAN

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
- 03. Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or shortening the life cycle of the product.
- 04. Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in fire.
- 05. Check 'Cautions during Power Wiring' and 'I/O Wiring' before wiring.**
Failure to follow this instruction may result in fire.
- 06. In preparation for product damage, communication error, or malfunction, install external emergency stop circuit, forward/reverse interlock circuit, limit switch, emergency stop switch, or other protection circuit.**
Failure to follow this instruction may result in personal injury, economic loss or fire.
- 07. Since Lithium battery is embedded in the product, do not disassemble or burn the unit.**
Failure to follow this instruction may result in fire.
- 08. Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire.
- 09. Please contact to us for battery replacement.**
Using an unauthentic battery may result in fire or product damage.

⚠ Caution Failure to follow instructions may result in injury or product damage.

- 01. Use a dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in fire.
- 02. When connecting the power input, use AWG 23 cable or over, and tighten the terminal screw with a tightening torque of 0.5 to 0.8 N·m.**
Failure to follow this instruction may result in fire or malfunction due to contact failure.
- 03. Keep the product away from metal chip, dust, and wire residue which flow into the unit.**
Failure to follow this instruction may result in fire or product damage.
- 04. Do not touch the front LCD screen over 2 points at the same time.**
Failure to follow this instruction may result in malfunction.
- 05. Do not put any heavy object on the front screen.**
Failure to follow this instruction may result in malfunction due to deformation of LCD and touch panel.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- Power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Operate the product after supplying power to the product, input/output equipment, and load. If operate product before supplying power, it may result in output error or malfunction.
- Use a USB cable within 2 m.
- Keep away from high voltage lines or power lines to prevent inductive noise. Do not use near the equipment which generates strong magnetic force or high frequency noise.
- Make a required space around the unit for radiation of heat, and do not block ventilation openings.
- Do not push the touch panel with a hard and sharp object or push the panel with excessive force. It may result in fire or malfunction.
- When skin is smeared with liquid crystal from the broken LCD, rinse with running water for over 15 minutes. If it gets into the eyes, rinse eyes with running water for over 15 minutes and contact a doctor.
- When changing the battery, contact Autonics service center to change it. Using unauthentic battery may result in fire or product damage.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000m
 - Pollution degree 2
 - Installation category II

Cautions during Power Wiring

- Do not apply power before power line connection.
- Check power polarity.
- For power supply, use the wire of which cross section is at least 0.75 mm² and use the wire of which cross section is at least 1.25 mm² for grounding.
- Use ring crimp terminal with at least 3 mm of internal diameter and less than 6 mm of external diameter.
- Tighten the terminal screw with 0.5 to 0.8 N·m torque.
- Ground resistance should be less than 100 Ω and ground it separately.

Product Components

- Logic panel + built in battery
- 7.0 inch: 4 fixing brackets
- 10.4 inch: 6 fixing brackets, CAN connector
- Sold separately: communication cable

Manual

For the detailed information and instructions, please refer to the manuals, and be sure to follow cautions written in the technical descriptions. Visit Autonics web site to download manuals.

- LP-A Series user manual
It describes general information about installation and system of LP-A Series.
- atDesigner user manual
It describes how to design user screen and how to use HMI function.
- atLogic user manual, atLogic programming manual
It describes how to install and use atLogic, how to program, and commands for LP Series.
- GP/LP user manual for communication
It describes how to connect with external devices such as PLC.

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

LP - A ① - T 9 D ② - C ③ ④

① Screen size

070: 7.0 inch
104: 10.4 inch

② Interface

| Series | ② | RS232C | RS422 | CAN | Micro SD | USB HOST | USB Device | Ethernet |
|---------|---|--------|-------|-----|----------|----------|------------|----------|
| LP-A070 | 6 | 1 | 1 | - | - | 1 | 1 | 1 |
| | 7 | 2 | - | - | - | | | |
| LP-A104 | 8 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| | 9 | 2 | - | 1 | 1 | | | |

③ I/O configuration

5: 7.0 inch - input 16-point, output 16-point
6: 10.4 inch - input 32-point, output 32-point

④ I/O connector type

R: Ribbon cable connector
T: Terminal block connector

Specifications

| | LP-A070-T9D □-C5 □ | LP-A104-T9D □-C6 □ |
|--|--|--------------------------------------|
| Screen size | 7.0 inch | 10.4 inch |
| LCD type | TFT Color LCD | |
| Resolution | 800×480 pixel | 800×600 pixel |
| Display area | 154.4×93.44 mm | 211.2×158.4 mm |
| Display color | 16,777,216 color | |
| LCD view angle (top/bottom/left/right) | Within 50°/60°/65°/65° of each | Within 60°/70°/80°/70° of each |
| Backlight | White LED | |
| Luminance adjustment | Adjustable by software | |
| Touch | Resistive type (4-wire) | |
| Input | 16-point | 32-point |
| Insulation method | Photo coupler insulation | |
| Rated input voltage | 24 VDC≒ | |
| Rated input current | X0 to X8: ≈ 10 mA, X9 to XF: ≈ 4 mA | X0 to X8: ≈ 10 mA, X9 to X1F: ≈ 4 mA |
| Voltage range | 19.2-28.8 VDC≒ | |
| Input resistance | X0 to X8: 3.3 kΩ, X9 to XF: 5.6 kΩ | X0 to X8: 3.3 kΩ, X9 to X1F: 5.6 kΩ |
| Response time | 0.5 ms | |
| Common method | 16-point/1COM | 16-point/1COM, 16-point/1COM |
| Applicable wire | Stranded wire 0.3 to 0.7 mm ² | |
| Output | 16-point | 32-point |
| Power supply | 24 VDC≒ | |
| Insulation method | Photo coupler insulation | |
| Rated load voltage | 24 VDC≒ | |
| Load voltage range | 19.2-28.8 VDC≒ | |
| Max. load current | 0.1 A/1-point, 1.6 A/1COM | |
| Max. voltage falling when ON | ≤ 0.2 VDC≒ | |
| Common method | 16-point/1COM | 16-point/1COM, 16-point/1COM |
| Applicable wire | Stranded wire 0.3 to 0.7 mm ² | |
| Approval | CE | |
| Unit weight (package) | ≈ 540 g (≈ 742 g) | ≈ 1.10 kg (≈ 1.66 kg) |

| | |
|-------------------------|---|
| Command | Basic command: 28, application command: 236 |
| Program capacity | 8 K step |
| Processing speed | Average: approx. 1μs/basic command, application command |
| I/O control method | Batch processing |
| Computer control method | Repeated-doubling method, interrupt processing |
| Device range | Refer to 'LP-A Series user manual' |
| Special function | Positioning function, motion controller, high speed counter |

| | |
|----------------------|---------------------------------|
| Serial interface | RS232C, RS422 |
| USB interface | USB Host, USB Device (USB2.0) |
| Ethernet interface | IEEE802.3(U), 10/100Base-T |
| CAN interface | 24V CAN transceiver |
| External storage | Micro SD up to 32 GB (FAT16/32) |
| Real-time controller | RTC embedded |
| Battery life cycle | 3 years at 25°C |

Supportive interface can be different up to model. Please refer to 'Ordering Information' for the supportive interface per model and 'LP-A Series user manual' and 'GP/LP user manual for communication' for the detailed information about each interface.

| | |
|------------------------|------------------------|
| Language | Korean, English |
| Text | Bitmap and vector font |
| Memory for user screen | 64 MB |
| Number of user screen | 100 pages |

| | |
|-------------------------|---|
| Power supply | 24 VDC≒ |
| Allowable voltage range | 90 to 110% of power supply |
| Power consumption | 7.0 inch: ≤ 7.2 W, 10.4 inch: ≤ 8.0 W |
| Insulated resistance | ≥ 100 MΩ (500 VDC≒ megger) (between all terminals and case) |
| Ground | 3rd grounding (≤ 100 Ω) |
| Noise immunity | The square wave noise (pulse width: 1 μs) by the noise simulator: ± 0.5 kV |
| Dielectric strength | 500 VAC~ 50/60 Hz for 1 minute (between all terminals and case) |
| Vibration | 0.75 double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 1 hour |
| Vibration (malfunction) | 0.5 double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 10 minutes |
| Shock | 147 m/s ² (approx. 15 G) in each X, Y, Z direction for 3 times |
| Shock (malfunction) | 100 m/s ² (approx. 10 G) in each X, Y, Z direction for 3 times |
| Ambient temperature | 0 to 50 °C, storage: -20 to 60 °C (a non freezing or condensation environment) |
| Ambient humidity | 35 to 85 %RH, storage: 35 to 85 %RH (a non freezing or condensation environment) |
| Protection structure | IP65 (front panel, IEC standard) |

I/O Connection Diagram

For the detailed information about pin number and others, please refer to 'LP-A user manual'.

■ 7.0 inch


| Input (source type) | Output (sink type) |
|---------------------|--------------------|
| | |

■ 10.4 inch

| Input (source type) | Output (sink type) |
|---------------------|--------------------|
| | |


Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.

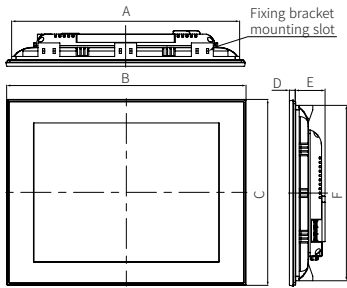


| | A | B | C | D | E | F |
|-----------|-----|-----|-----|-----|------|-----|
| 7.0 inch | 185 | 194 | 134 | 6.5 | 28.5 | 125 |
| 10.4 inch | 260 | 273 | 212 | 7.2 | 34 | 200 |

- Fixing bracket
- Panel cut-out

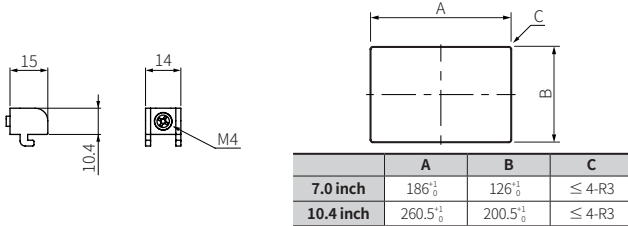


Program Status Indicator

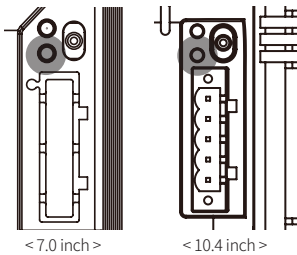

| Indicator Color | Status | Program status |
|------------------------------------|----------|-------------------|
| Green | ON | Run |
| Green | Flashing | Pause |
| Red | Flashing | Error |
| 7.0 inch: orange 10.4 inch: red | ON | atLogic debugging |

Installation

- Set the product in panel. (panel thickness: ≤ 4mm)
When installing the product on panel, make 100 mm of space from upper, lower, right, left side of the product, on panel and back side of panel. It is for preventing effect of electromagnetic waves and heat from other controllers. [Image 1]
- Set fixing brackets in the fixing bracket mounting slots. [Image 2]
- Tighten the fixing bracket with M4 Screw driver and tightening torque is 0.5 to 0.6N·m.

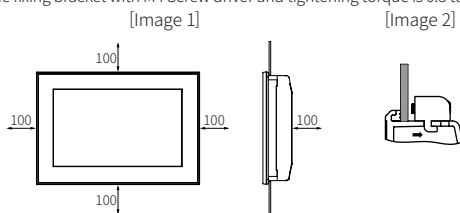

Software

Visit Autonics web site to download software.

- atDesigner
atDesigner is for editing project file.
- atLogic
atLogic is for writing and debugging program.
- Recommended computer specification

| Item | Recommended spec for atDesigner | Recommended spec for atLogic |
|------------------|----------------------------------|------------------------------|
| Operating system | Windows XP/Vista/7/8/10 | Windows 7/8/10 |
| CPU | Over Intel Core i5-2nd gen. 2500 | Over Pentium Dual Core |
| Memory | Over 8 GB | Over 1 GB |
| Hard disk | Over 8 GB free space | Over 5 GB free space |
| Resolution | 1920×1080 | 1280×1024 |

- Firmware
Please refer to 'LP-A Series user manual' for firmware upgrade.

Interface

Interface is different up to the model.

For the detailed information about each interface, refer to the 'LP-A Series user manual' and 'GP/LP user manual for communication'.

Serial port (RS232C/RS422)

| RS232C | | RS422 | | |
|------------------|--------------|--------------------|--------------|------|
| Port | Pin function | Port | Pin function | |
| | 1 | - | 1 | TXD+ |
| | 2 | RXD | 2 | RXD+ |
| | 3 | TXD | 3 | - |
| | 4 | DTR | 4 | - |
| | 5 | SG | 5 | SG |
| | 6 | DSR | 6 | TXD- |
| | 7 | - | 7 | RXD- |
| | 8 | - | 8 | - |
| | 9 | - | 9 | - |
| D-sub 9 Pin Male | | D-sub 9 Pin Female | | |

USB port

| Type | Port | Function |
|------------|------|---|
| USB Host | | <ul style="list-style-type: none"> Coping data between storage and LP Firmware upgrade Connecting external device (bar-code reader, printer, etc.) External memory: max. 32GB (supported file system: FAT16/32) |
| USB Device | | <ul style="list-style-type: none"> atDesigner project upload/download |

Use a USB cable within 2 m.

Ethernet port

It is available to upload/download project file by connecting PC and atDesigner, and monitor PLC which supports Ethernet communication protocol.

CAN port

| Number | Color | Function | Configuration |
|--------|-------|-----------|---------------|
| 1 | Black | 24VDC≐(-) | |
| 2 | Blue | CAN_L | |
| 3 | None | SHIELD | |
| 4 | White | CAN_H | |
| 5 | Red | 24VDC≐(+) | |

Micro SD

External memory: max. 32 GB (supported file system: FAT16/32)